

Reprogramming Remote *TT*




It is necessary for the battery and hydraulic hoses to be properly connected.

- 1) Verify that the remote control is functional by pressing continuously on *button 1 or 2*.



- 2) Otherwise, replace the battery (cr2032) and try again, if it still does not flash. Contact your dealer. Verify if remote control is synchronized by switching on the hydraulic unit. Otherwise, reprogram remote: Open box receiver with a screwdriver.
- 3) Press the *reset* button, orange light should flash rapidly (otherwise, unplug the receiver box and reconnect it, if no led is lit).
- 4) Immediately press continuously *button 1 or 2* on the remote until it is synchronized, operation needs to be done while the orange light flashes.
- 5) Repeat steps 4 and 5 for other remote if needed
- 6) Close the receiver box and then reattach it to the hydraulic unit

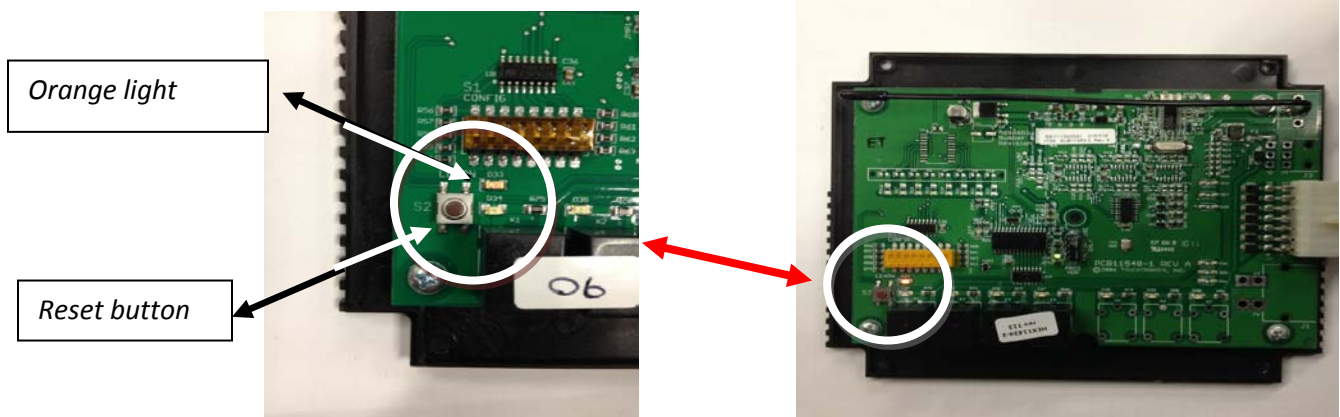

Reprogramming Remote *WJ*



It is necessary for the battery and hydraulic hose to be properly connected.

- 1) Verify that all transmitters and receiver are switched off.
- 2) Press and hold the *on/off* button on the receiver until the *yellow* indicator light flashes.
- 3) Press and hold the *on/off* button on the remote control for 4 seconds and release the button.
- 4) Turn *off* both the remote and the receiver by pressing the *on/off* button. All light must be turned off.
- 5) Turn *on* remote control and try on.
- 6) Repeat for another remote if needed.

